

PRESTO II AIR TURBINE GRINDER ◀◀


ULTRA-HIGH SPEED AIR TURBINE GRINDER

PRESTO II

320,000 min⁻¹

ø1.6 mm Bur Only

- Ultra high speed 320,000 min⁻¹ non-lube air turbine.
- It is most suitable for precision processing works such as small precision parts, ceramic, correction of printed circuit board, etc. due to its non-lube handpiece.
- Flexible tubing ensures excellent workability reducing fatigue to the operator's hand for long continuous use.

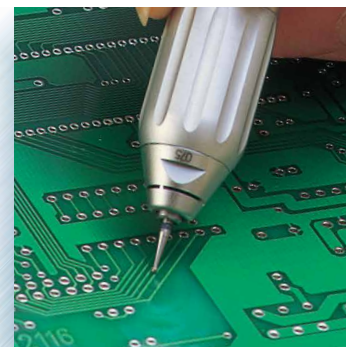

PRESTO II Standard Set

Code No. **1125**

Model **PR2-304S**

Standard Equipment

- Presto Handpiece (PR-304) : 1 pc.
- Air Line Kit (PR2-06) : 1 pc.
- Foot Controller (AFC-40) : 1 pc.
- Handpiece Holder (Z014) : 1 pc.



Specifications

| | |
|---------------------|-----------------------------|
| Rotating Speed | : 320,000 min ⁻¹ |
| Proper Air Pressure | : 0.25 MPa |
| Air Consumption | : 40 NL/min |
| Inside Diameter | : ø1.6 mm Bur Only |
| Filter Mesh | : 5 µm |

PRESTO Handpiece

320,000 min⁻¹


Code No. **1122**

Model **PR-304**

◆ Weight : 71 g (w/o Hose)

Standard Accessories

- 2 m Hose

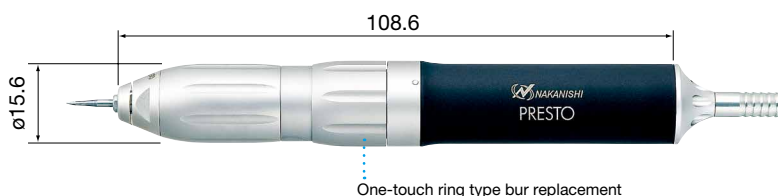


- Ultra-high speed no lube air turbine handpiece ideal for delicate processing application.
- Built-in dust protect mechanism developed by NAKANISHI ensures long durability.
- Chip air blows away the cutting powder and cools the cutting tool.
- Flexible tubing ensures excellent workability reducing fatigue to the operator's hand for long continuous use.

PRESTO II Spare Parts

| Product | Description / Specifications | Code No. | Model |
|---------|------------------------------------------------------------|-------------|--------|
| | PRESTO II Air Line Kit (w/o Lubricator / Filter Mesh 5 µm) | 1126 | PR2-06 |
| | PRESTO II Cartridge | 1120 | PR-03 |
| | Foot Controller | 1124 | AFC-40 |
| | Piping Hose (ø6.0) 2 m Long | 2041 | K-237 |
| | Air Turbine Hose (ø5.1) 2 m Long | 2042 | K-238 |
| | Pin Spanner | 2002 | T-751 |

ø1.6 mm tools for PRESTO II

Please see the NAKANISHI "TOOLS" Catalog

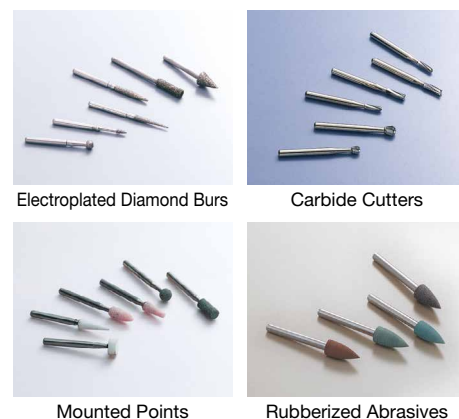

◆ Order by Code No.

Electrically Driven

EmaxEVO
ESPERT

Air Driven

ROTUS
IMPULSE
PRESTO II

General Parts

GENERAL
PARTS

CAUTION

Exclusive Tools

EXCLUSIVE
TOOLS

INDEX

Protective
Equip.